

# Header Tank

Increasing the height of the tank provides greater pressure. The tank can be placed on a stand or on a hill

Fence with locked gate

Check gate is locked and fence secure

FLOAT VALVE (inside tank)

**FULL**  
Check the water level everyday

**HALF**

**LOW**

Keep lid secure

Seal your tank so that rain can not wash dirt into it

Stairways, fixed platforms and ladders must be safe and comply with safety standards

PLATFORM

LADDER

Keep grass inside fence cut

Overflow pipe directed away from tanks

If water overflows continuously check float valve

ISOLATION VALVE

ISOLATION VALVE

RISING MAIN

To community →

Clean away any bird droppings/dung on or around the tank

Concrete base around tank

## Your water supply system

Putting your system in

Keeping your system going