

WATER SOURCE

STORAGE

DISTRIBUTION SYSTEM


WATER USE

WASTE WATER

Pipes

- ✗ Getting water out of an air release valve will break the valve
- ✗ Only cut grass near water supply - do not burn or poison it

Drinking troughs for animals need an air gap between the float valve outlet and the water level

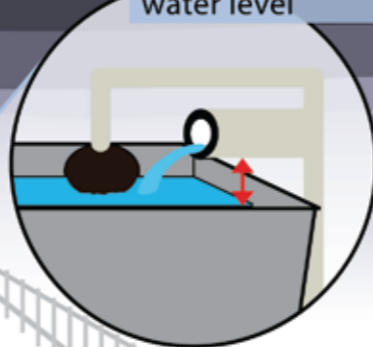

Secure insect screen on air release valve


Flush pipes after any major repairs and every 6 months for 10 minutes from overhead fire fill point

Mark location of new pipes with bollards or concrete markers

GROUND LEVEL

VALVE
V

Cut grass around outlets

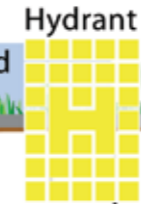

To community

From community water supply

Keep pipes buried at least 300mm below ground

A crack in the pipe can let bacteria into the water supply

Protect your pipes from tree roots

Your water supply system