


# Ground Storage Tanks

Disinfection using chlorine tablets is often conducted in ground storage tanks. If you treat the water in the storage tank remember:

- ① DOSE
  - ② TIME - wait 30 minutes
  - ③ CHECK - residual chlorine level
- 0.5mg/L or 1mg/L

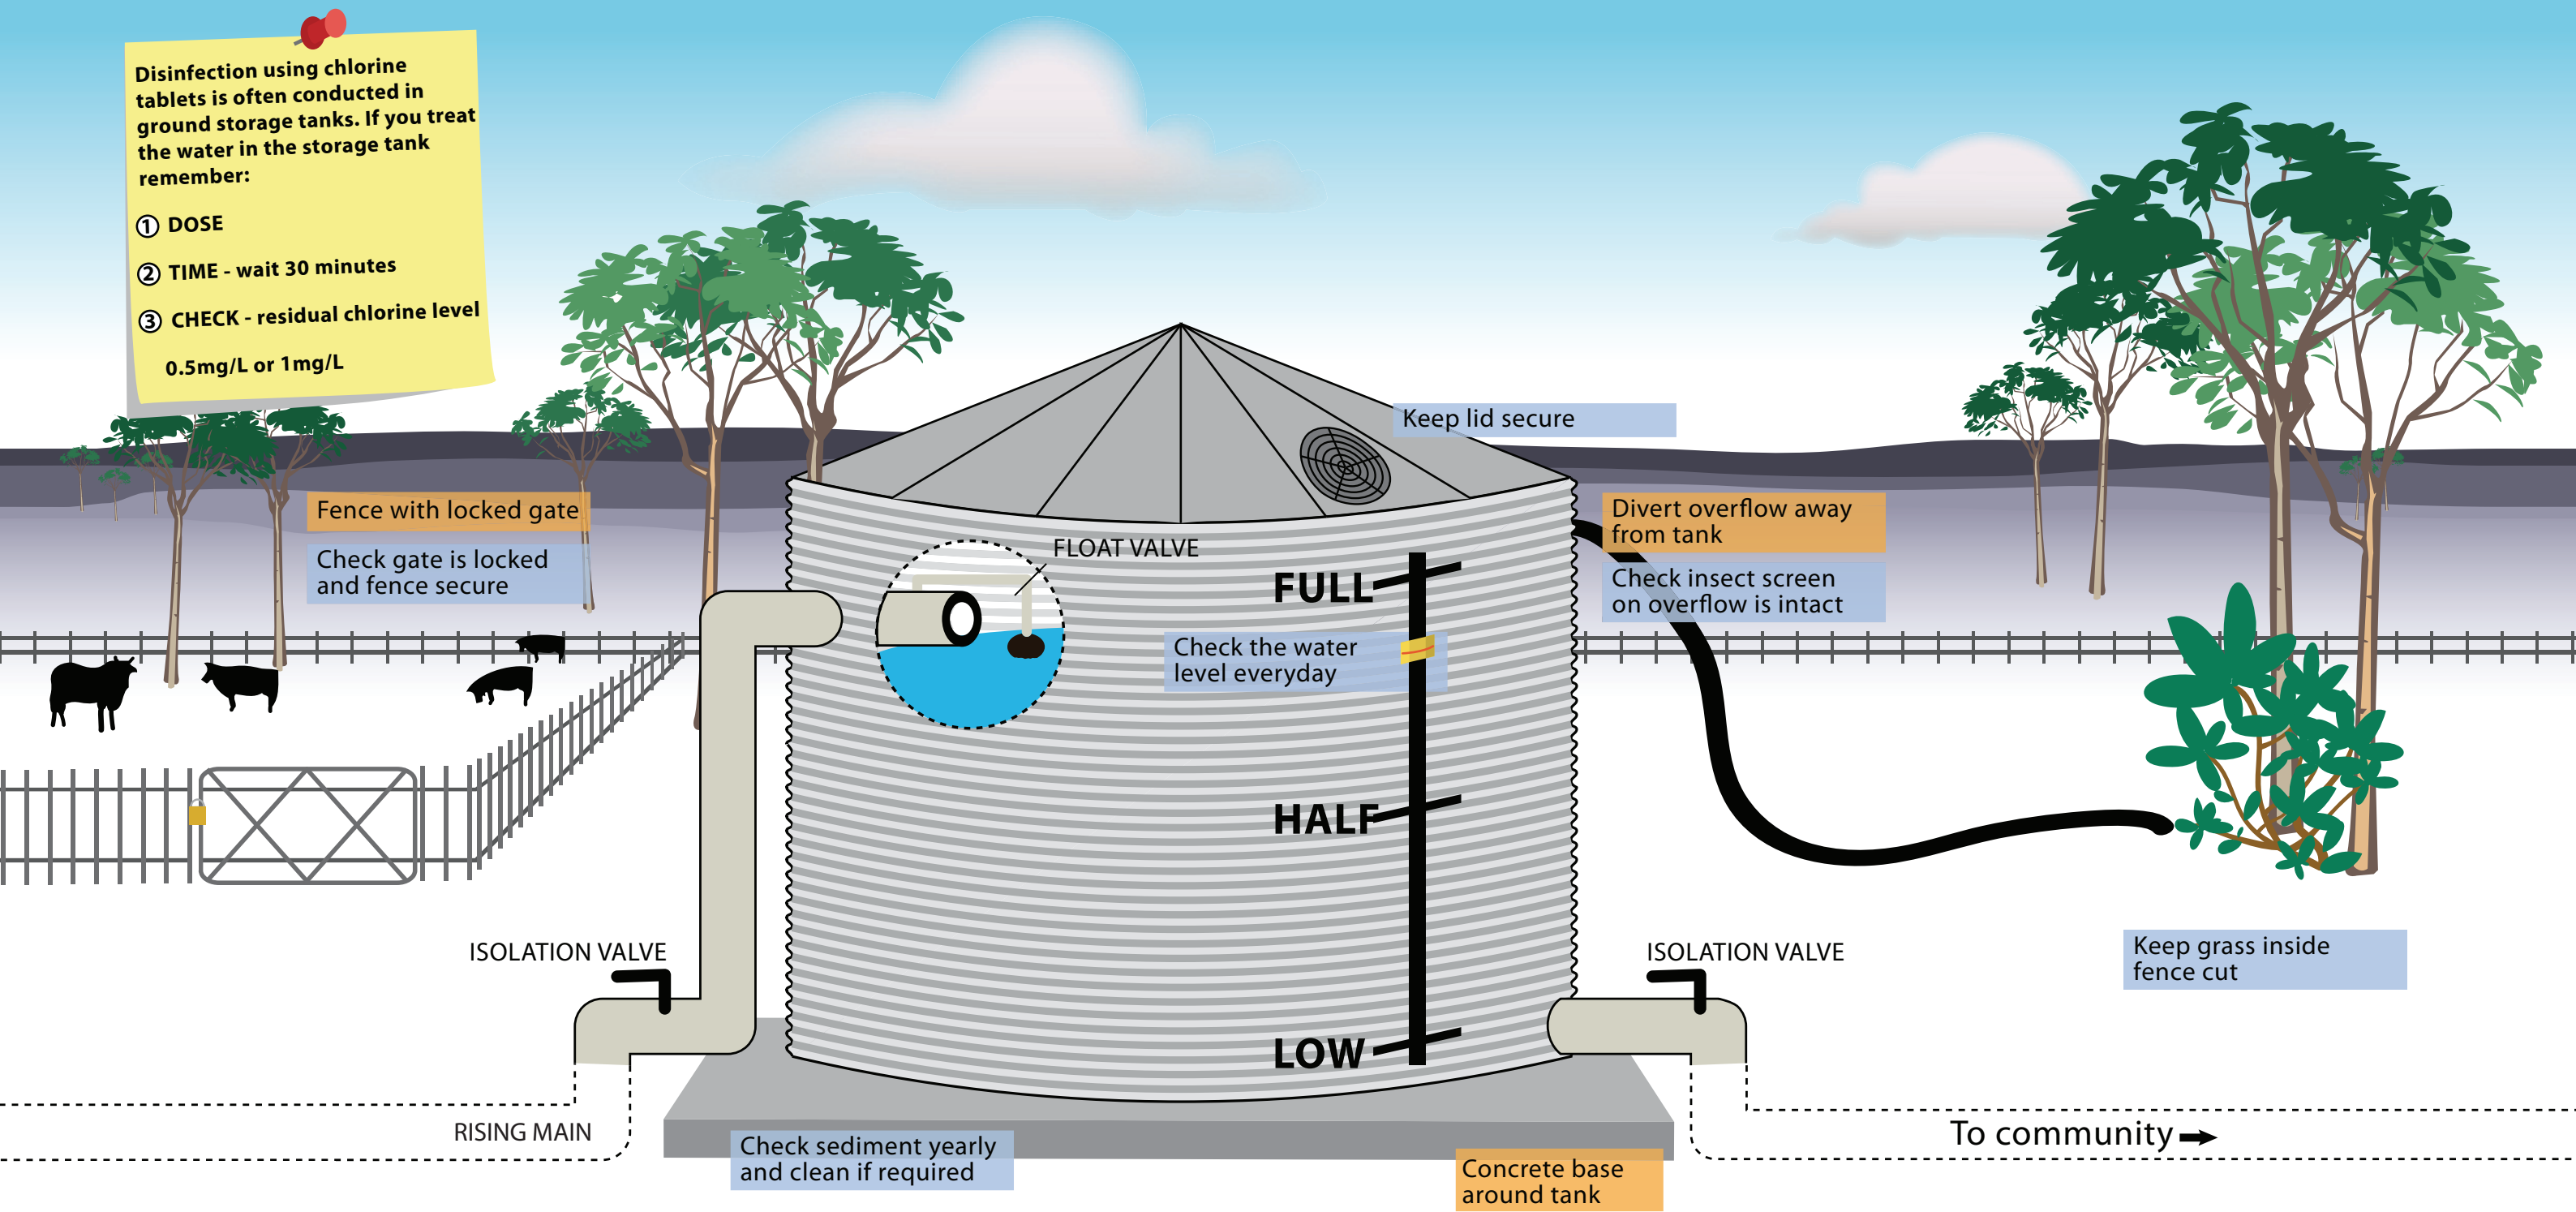

Fence with locked gate

Check gate is locked and fence secure

Keep lid secure

Divert overflow away from tank

Check insect screen on overflow is intact

FLOAT VALVE

FULL

Check the water level everyday

HALF

ISOLATION VALVE

RISING MAIN

Check sediment yearly and clean if required

ISOLATION VALVE

Concrete base around tank

Keep grass inside fence cut

To community →

## Your water supply system

Putting your system in

Keeping your system going